 


# Touch Screen Anti-Bark Dog Collar - Beep & Dual Motor Vibration




## Overview

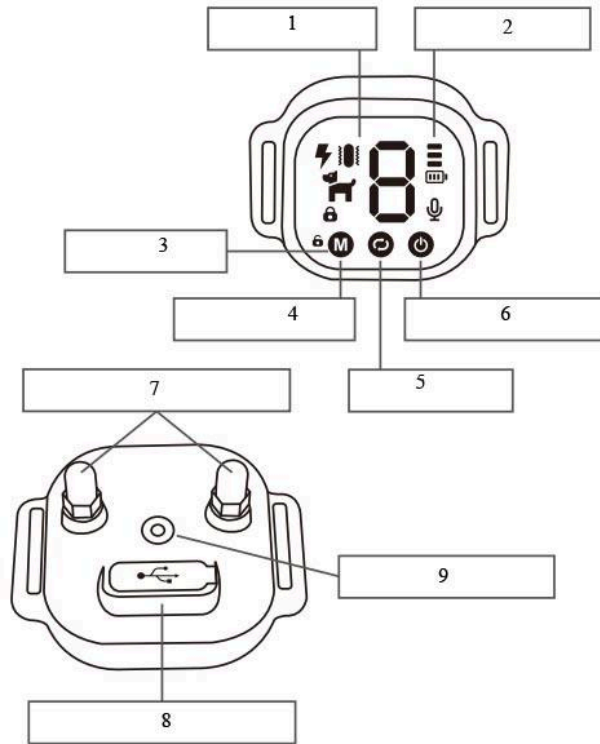

1. LED Display
2. Battery Level
3. Lock Button
4. Switch Mode
5. Adjust Level
6. Power Button
7. Static Shock Probe
8. USB Charging port
9. Sound Sensor


## How does the collar works

Principle of barking prevention - The collar is triggered by dog barking, a sound sensor built in the collar, features are triggered while the sound sensor receives barking.

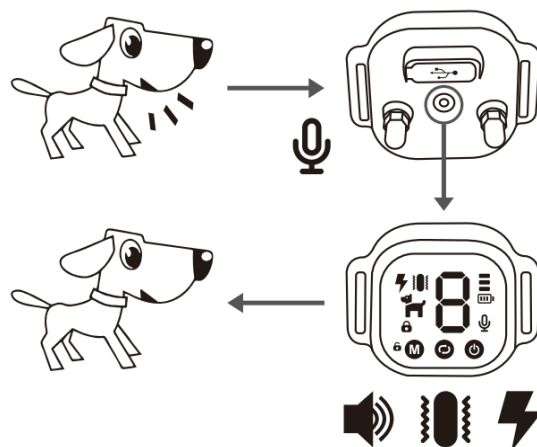

## Turn On/Off the collar


1. Long press Power Button for 2 seconds to turn on the device, hearing a bi~ sound.
2. Long press Power Button for 2 seconds again to turn Off, hearing Bi~bi~ sound.
3. Turn the device on, the device is Locked status, Long press the M Button for 2 seconds to Unlock it.

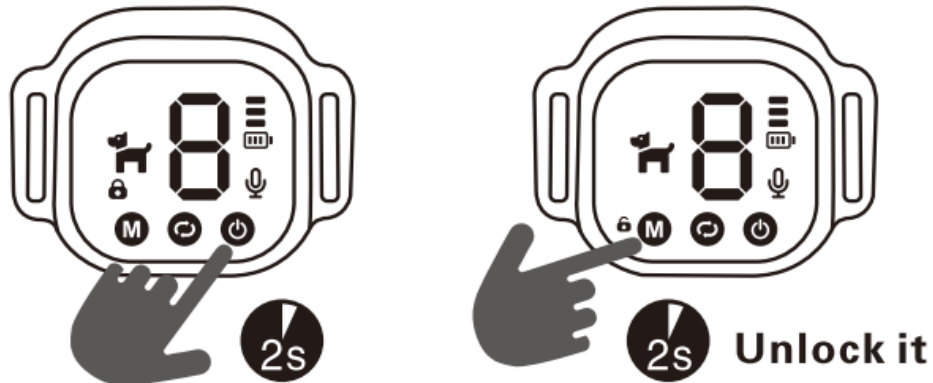

Note: If no operation in 10 seconds, the device will go into Lock status automatically; All buttons are unavailable in the locked state.

## Battery & Charging


### Battery indicator

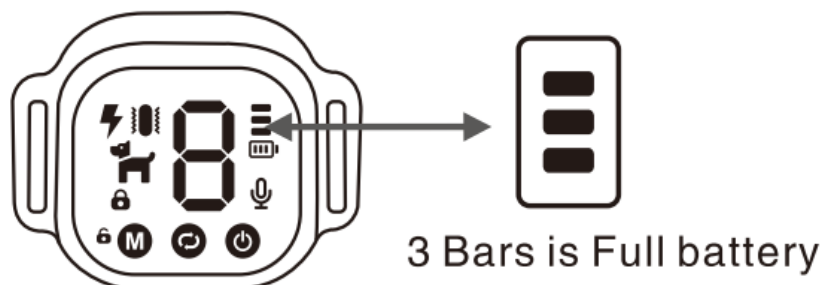


When the battery is getting low, the battery symbol will flash.

## Battery charging

At 1 bar battery indicator, please begin charging. It's recommended to turn OFF the collar after each use, this can greatly extend the standby time.

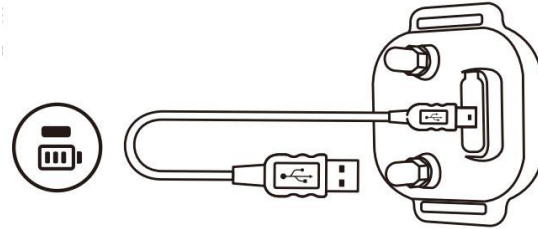

## Assemble the collar

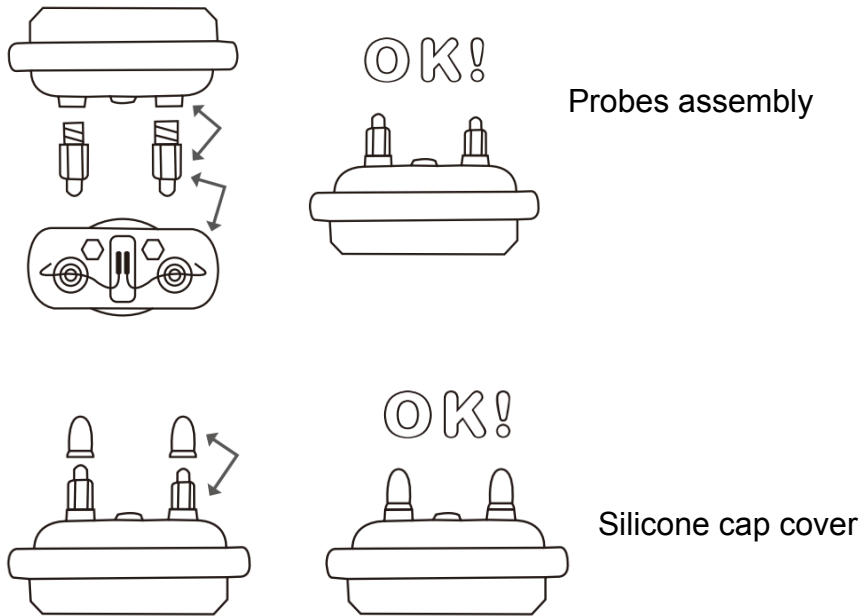


The metal probe is already installed on the collar. There are couples of silicone probe covers in the box, the silicone protective cover can be applied to the probes to protect the dog's skin from shock or irritation. You could choose a long silicone cover or short silicone cover according to the dog's hair. If the dog's hair is very long, just shave the dog's neck.

## Setting Operation

1. Long press Power Button for 2 seconds to turn the device on, display the Bark sensor level, Now the device is Locked status.



2. Long press the M button for 2 seconds to Unlock the device; Short press (M) to switch functions; Press (C) to adjust the level.

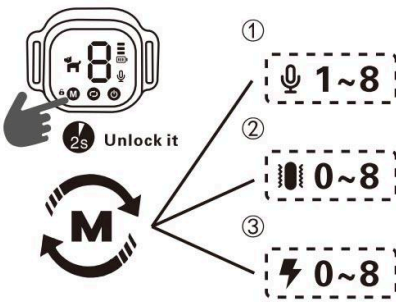

1. Bark sensor - 8 is most sensitive
2. Vibration - 8 is highest vibration, 0 is off
3. Shock - 8 is highest shock, 0 is off

## TEST





1. Setting sound sensor




2. Setting vibration

### 3. Setting E-shock

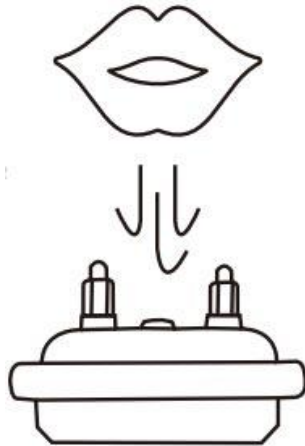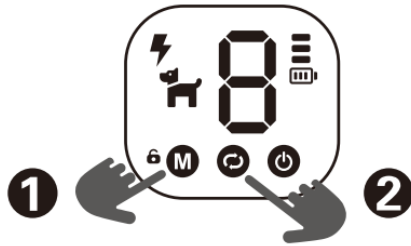

4. Blow towards the sound sensor to trigger the device, Beep, vibration, shock will be executed one by one, Hearing long Di~~ sound, then the device begins to vibrate, then start to Shock.

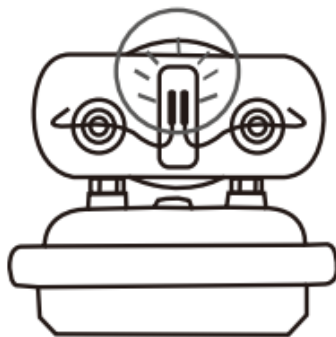


5. The shock feature needs to be tested with the test light, if the shock feature works, the test light will light up, the higher the shock level, the brighter the light.


#### Note:

1. If the vibration level is 0, the device is not triggered by the vibration function, if the shock level is 0, the device is not triggered by the shock function.
2. If the device is triggered 7 times continuously, it enters the protection state for 1 minute automatically, and can't be triggered. It can be triggered again after 1 minute.

## How to wear

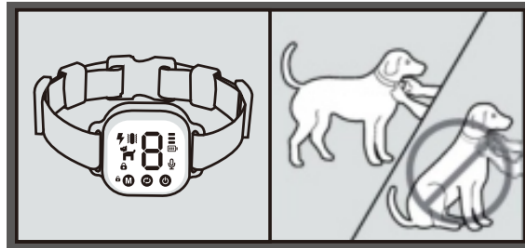

1. Adjust the buckle position and determine the length of the strap. Place the slider buckle and device in the position shown in figure. Insert the extra strap in to the slider buckle. Prepare for wearing.
2. Wear the collar around the dog's neck in a personally comfortable way.
3. Adjust the position of the device to the position of the dog's front throat. Adjust the tightness of the strap to the best condition and make sure that the probes touch the skin.

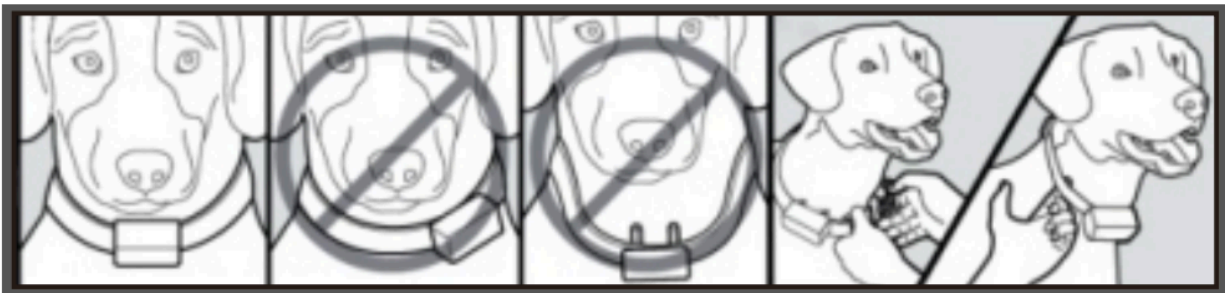

## Important safety information

WARNING denotes a potentially dangerous scenario that, if ignored, might result in the dog's death or serious injury.

1. Do not give this training kit to children or anybody with little to no expertise teaching dogs.
2. If your dog exhibits symptoms of growling, snarling, biting, or aggressiveness while wearing the collar, immediately stop using it and seek guidance from a professional trainer.
3. Do not attach the dog leashes to this training collar!
4. Do not use the device on dogs who are less than three months old, weigh less than eight pounds, are old or pregnant, easily scared, aggressive, or in heat, or are otherwise in poor condition!

5. Do not leave the collar on your dog for more than 12 hours per day! (Better within 6h)
6. Don't charge this product with a charger of more than 5 volts.
7. Daily check the skin health of the dog's neck and clean the dog's neck region and collar with a damp towel, if there are any anomalies, discontinue usage of this product and consult a veterinarian!
8. It is forbidden to use the product in extremely hot (above 40 degrees Celsius) or extremely cold (below 0 degrees Celsius) environments.

## FAQ

Why does the collar not work when the dog barks?

- There may be three reasons for this problem. The first is that the trigger sensitivity is not high enough, so try to increase the trigger sensitivity. Second, the probe does not touch the skin, so try to adjust the belt tightness to ensure good skin contact. Third, the training level is not high enough, so try to increase the training level.

Is the bark control collar safe and humane?

- All training methods will not cause any direct harm to the pet's body, but make them feel extremely uncomfortable. But even so, do not overuse this product on pets. Please refer to all WARNING and CAUTION contents in the manual.

Other dog barking sounds or other ambient noise can trigger the collar.

- It is possible, but the probability is very low. We optimized the dog barking waveform recognition technology to enhance the ability to resist false triggers. If a false trigger occurs, please adjust the sensitivity setting appropriately.

## Other precautions for use

**WARNING** - Please shut down when not in use, and keep the product in a safe place out of reach of children and pets.

**CAUTION** - It is forbidden to use this product as a matching collar for pet leashes. It is recommended to clean the contacts weekly with alcohol or other disinfectants. Please shutdown when cleaning.

1. Remove all other types of collars. These collars will produce noise that will cause false triggers.
2. Please remove the collar before playing with the dog. Dog barking during play can cause unnecessary triggers.

## **Maintenance**

1. Do not use the product if it becomes ineffective due to a drop, damage, outdoor use, or water infiltration. To avoid harm, the manufacturer or its after-sales service should repair the product.
2. When the device is not in use, disconnect it from the power source and wipe both the Remote and Receiver clean with a mild detergent. Switch off the Remote, turn off the receiver, cover the rubber lid tightly on the Receiver's charging port, and store the set in a cool, dry location.
3. Wipe with a soft cloth and a light detergent while cleaning. Avoid using bristly brushes that might scratch the device's surface.
4. If the Receiver has become filthy, secure the rubber cap on the charging port.
5. This product is intended for professional dog training purposes only and should not be used for any other reason. Please do not use this product in violation of any local laws.