 


A4B Portable Inkless Thermal Printer with Bluetooth



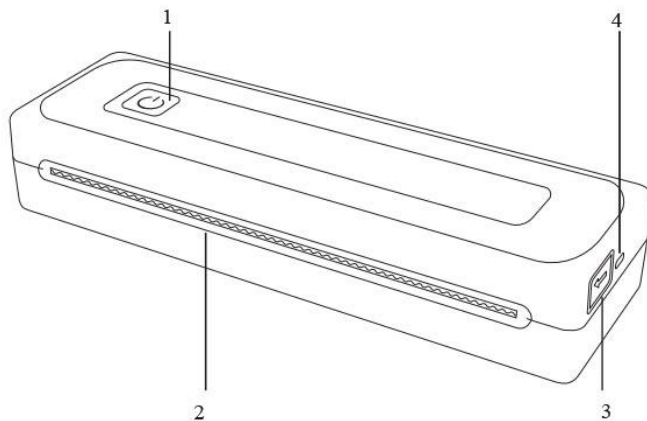

1. Power switch
2. Exit hole
3. Open button
4. Charging port


Application installation

For Apple users, please search for "iPrint" in the AppStore to download the APP;
Android users please search for "iPrint" in Google Play to download the APP.


Switch on and off

Power on: Long press the power button for 3 seconds until the indicator lights up;
Shutdown: Long press power button for 3 seconds until the light is off.

Feed operation

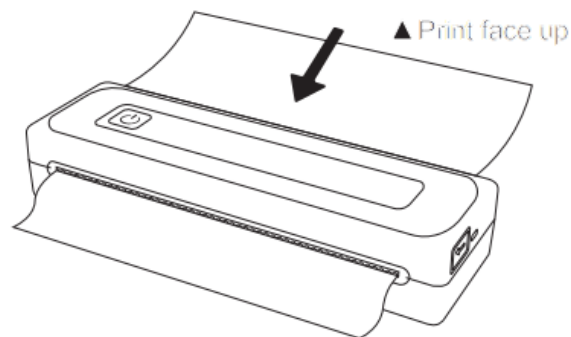

A4 paper feed operation

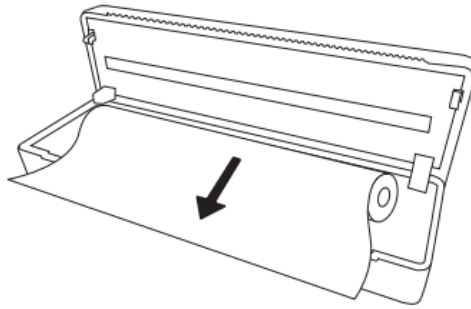


Roll paper feed operation

▲ Print face up

Paper jam, exception handling and cleaning

Press the open cover button to open the flap assembly and rotate it at a certain angle. Do not force the paper out when the paper is jammed, otherwise it will easily cause damage to the printer.

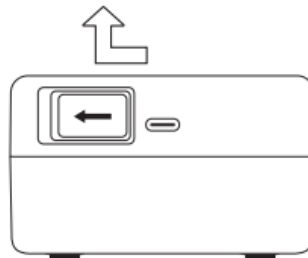

Connected application

After the device is turned on, turn on the Bluetooth function of the mobile phone, open the app, click the “Select equipment” button at the top, Go to the “My Device” page and click the Bluetooth name at the beginning of GT08 to connect the printer’s Bluetooth. If Bluetooth is not displayed after entering, please click the refresh button and try again.



Pilot lamp

Stable colour - Bluetooth connected

Flicker - Wait for connection

Red light - Charging

Q&A

No connected device is found when I add a device to the APP?

- Please check whether the device is turned on to ensure that Bluetooth is working.

What can I do if my device cannot print?

- Confirm whether the Bluetooth of the mobile phone is turned on, and exclude the possibility of others connecting to this device.
- Check whether the thermal paper is jammed.
- Check whether the print head is overheating. If it is overheating, wait for the print head to cool before trying to print.
- Make sure that there is printing paper and that the printing paper is thermal paper. The front and back sides of the printing paper are placed correctly.

Why is the print all white paper, no content?

Confirm whether thermal paper is used for printing paper.

Whether the front and back directions of the printing paper are correct.

- It may be caused by incorrect installation of printing paper. Please refer to the introduction of Replacing printing paper to reinstall it.

Why did the printed word fade?

- Please check whether the device is low power.
- Check whether the print head is covered with stains, please wipe gently with an alcohol cloth.

Safety and precautions

- Do not charge or use the printer in hot, humid or dusty places.
- Please charge with 5V2A input and charge with a mobile phone power adapter.
- After printing, do not touch the print head directly to prevent overheating and scalding.
- Gently insert or remove the charging cable to prevent excessive force from damaging the interface.
- Improper charging may result in print head damage.
- Unplug the charging cable after charging.
- Place the machine on a solid and stable horizontal plane to prevent the machine from slipping and damaging.
- Please turn off the power when you do not use the machine for a long time.
- Prevent foreign matter from being transferred into the machine, so as not to cause failure or other risks.