

# Portable DAB Radio & Bluetooth Speaker C10




## **Specifications:**

- Digital frequency (DAB/DAB+): 170MHz - 240MHz
- Analogue frequency (FM): 87,5MHz - 108MHz, with RDS
- Speaker: 3", full range
- Display: 2,4" TFT color
- Bluetooth version: v5.0
- Stations memory: 40 FM and 20 DAB
- Input power: DC 5V, 1A
- Ports: TF/microSD card, AUX-in, 3,5mm
- Battery: 1800mAh
- Dimensions: 170mm x 95mm x 55mm

## **Product overview:**

1. Menu
  - Short-press check station info
  - Long-press enter menu
2. Volume knob / select button
3. Previous station or track
4. Next station or track
5. Mode
  - Short-press mode selected
  - Long-press standby show clock
  - Long-press in standby mode to turn it off
6. Back/exit button
7. 1/2/3+
  - Short-press recall preset stations
  - Long-press save preset stations
8. 3.5mm headset port
9. AUX
10. LED charging indicator
11. DC 5V power input
12. Telescopic antenna

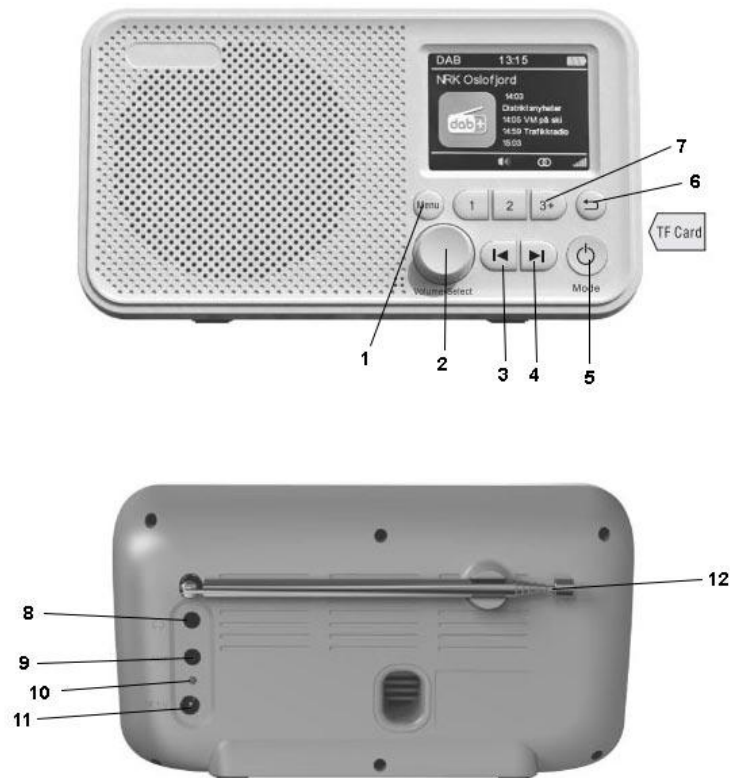

## Instructions for use:

### 1. Turn on/off the radio

- Press and hold the Mode button to turn it on
- Press and hold the Mode button to enter standby mode
- Press and hold the Mode button again to turn it off

### 2. Mode switch

- When the radio is on, press the mode button to switch the mode (DAB/FM/AUX/Bluetooth/TF), then press it again to choose the mode

### 3. Clock and alarm setting

- When the DAB is working, the clock time will automatically set using the clock time data in the DAB signal
- You can set time and data manually in any mode. Press and hold the Menu button to enter the menu setting

### 4. Backlight dimmer setting

- In any mode, press and hold the Menu button to enter the menu and set backlight timeout and level
- You can also press and hold the back button to set the dimmer level

## **FM radio:**

### 1. Scan the FM radio stations

- In FM mode, press the next/previous button to search FM station
- In FM mode, press the next/previous button to search previous or next FM station
- In FM mode, press the Menu button to check FM station information

### 2. Set preset FM stations

- When the FM station is playing, press and hold the 1/2 button to store the station
- When the FM station is playing, press and hold the 3+ button to preset the address list (40 addresses), press the next/previous button, or use the select knob to choose and select the address

## **DAB radio:**

### 1. Scan the DAB radio stations

- In DAB mode, press and hold the Menu button, select scan to scan all DAB stations, or press and hold the select knob to scan all DAB stations
- In DAB mode, press the next/previous button to check the stations list, turn and press the knob to select stations
- When the DAB station is playing, press the Menu button to check station information

### 2. Set preset DAB stations

- When the DAB station is playing, press and hold the 1/2 button to store the station
- When the DAB station is playing, press and hold the 3+ button to preset the address list (40 addresses), press the next/previous button, or use the select knob to choose and select the address

## **Bluetooth mode:**

### 1. Connect your smartphone

- Turn on the Bluetooth on your phone
- In Bluetooth mode, use your phone to search for C10 to pair

### 2. Bluetooth streaming

- In Bluetooth mode, the screen displays the connected smartphone's name
- You can change tracks using the next/previous button
- Press the select knob to play/pause music