


ZC-M11 4K Ultra HD Action Body Camera for Sports



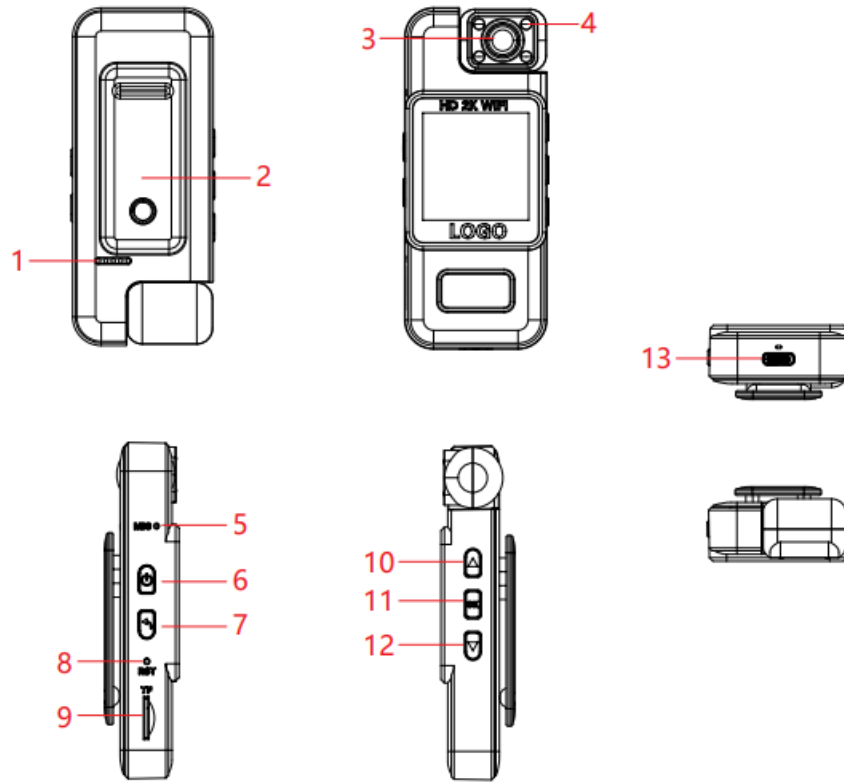

- 1) Bugle
- 2) Back shoulder clip
- 3) Spinning lens
- 4) Infrared lamp
- 5) Marker hole
- 6) Power button
- 7) Return key
- 8) Reset the hole
- 9) TF card slot
- 10) On the key
- 11) OK key
- 12) Under the key
- 13) USB joggle

Introduction of key button and interface functions

1. Power switch

- Long press to open / close
- Click on the breath screen

2. Return key

- Click and press to switch to the function interface
- Long press the open / exit menu

3. On the key

- Select the key up
- When taking photos and recording video mode, click press to enlarge the focal length
- Photo / video / recording mode point long press to open the WiFi mode, long press off again
- Replay mode point press to switch to the previous file

4. Under the key

- Select key down
- When taking photos and recording video mode, click press to reduce the focal length
- In video / photo mode, press on infrared (display icon), and press off again
- Replay mode point press to switch to the next file

5. OK key

- Click to record the video / photo / recording
- Confirmation key
- Press the photo and video mode to flip the lens direction 180, and press again to restore the lens direction

6. Reset key

- When the machine appears, flower screen, abnormal crash and other on, with pinhole like things short poke can be forced to shut down.
Note: In video / photo / recording / playback mode, no card plugging!

7. USB joggle

- Interface type: Type-C
- To connect the external power supply to charge the battery or to provide the working power supply
- Use to connect the PC terminal for 'memory / PC camera / video mode' operation

Basic operation instructions

1. Mobile detection

- Mobile detection When moving or when some objects move, it will automatically detect and start video recording
- From dynamic to static state, automatically stop recording after 30 seconds
- Still, recording is not start

2. Hidden mode

- Hidden mode With the hidden mode on, the device will turn off all sounds and indicators

3. USB pattern

- The device uses USB data to connect to the computer. After the device is automatically turned on, the screen displays three options of 'memory / PC camera / video mode':
 - Memorizer: In this mode, video, photo and recording files can be accessed and viewed
 - PC camera shooting: In this mode, it can be used for the computer camera
 - Video mode: Only used for computers to power the equipment

4. Playback mode

- Long press "Return key" to call out the delete menu, long press again to exit

5. WiFi pattern

- Open WiFi: In the photo / recording / recording interface, long press the 'up button' to turn on WiF

- Installation and use WiFi: Before turning on WiFi, download and install the Wind recorder app on your smartphone. Note: Android, please scan the QR code prompted in the device, or scan the QR code below; iso: search 'wind recorder' in Apple Store to download.

Connection step



- 1) After the device is turned on, long press "Up" to open wifi, the screen will show the device wifi name and password indicating that wifi is on;
- 2) Click on the downloaded APP and find the "Add device" -enter the wifi setting to find the wifi name displayed by the device and enter the password, then the connection is successful.
- 3) Close WiFi: After opening the WiFi function, long press 'Up button' and click 'OK' to turn off the WiFi.

Product parameters and specifications

Model: ZC-M11

Master control: AX3292

Image sensor: GC1084

Camera lens: Rotatable lens, 180 degrees

TFT display screen: Color display screen (240 × 240)

Video resolution: 4K, 2K, 1920x1080P, 1280x720P

Video file format: AVI

Picture quality: 1M, 2M, 3M

Photo format: JPG

Circulating video: Off, 1 minute, 2 minutes, 3 minutes, 5 minutes, 10 minutes, 15 minutes

Colour balance: Automatic, daylight, cloudy day, tungsten wire lamp, fluorescent lamp

Exposure compensation: 6, 5, 4, 3, 2, 1, 0, -1, -2, -3, -4, -5, -6
Mobile detection: Close, open
Recording function: Close, open
Camera time mark: Close, open
Keypad tone: Close, open
Time set: User-defined
Auto shut off: Off, 1 min, 3 min, and 5 min
Language: Britain, simplified Chinese, Traditional Chinese, South Korea, Russia, France, Germany, the Czech Republic, Portugal, Poland, the Netherlands, Turkey, Thailand
A-C cycle: 50Hz, 60Hz
Automatic turn off the screen: Off, 1 min, 3 min, and 5 min
Sound volume: Pass, 1-7
Switch machine volume: Close, open
Hidden mode: Close, open
Recording file format: WAV
Delete: Delete, delete all
Format: Confirmation, cancellation
Reset the system: Confirmation, cancellation
Software version: ZC-M11 V1.1 20240518 V1.0
Working humidity: 85%
Working temperature: -20°/+60°
Battery voltage / current / power: 3.7V/≤302mA/≤1.117W
Standby current: 36.5uA
Low electric prompt: 3.67V
DC input / current / power: 5V/≤633mA/≤3.165W
Storage card: TF card, with a maximum support of 128G
Keying: 6 Keys
Joggle: USB, TF card slot