

V321 OBD2 Car Fault Diagnostic Scanner with 2.4" Colour Screen



Functional keys



1. Product connection cable, used to connect car OBD interface
2. 2.4-inch color display screen, resolution: 320 x 240
3. Green light: supports vehicle detection
Yellow light: Detected vehicle malfunction
Red light: The product is powered on normally
4. Quickly read fault codes
5. Quickly access the testing report
6. Return/Exit
7. Battery testing
8. Confirm button
9. Press the right or next button

Product Parameters

- Working voltage: DC9~16V
- Working current: 40mA~60mA
- Operating environment:- 20~60°C
- Storage temperature:- 20~60°C
- Dimensions: 151 * 81 * 26.2mm
- 10 languages: English, German, Italian, Polish, French, Spanish, Chinese, Russian, Japanese, Portuguese.


Supporting Agreements

1. SAE J1850 PWM (41.6Kbaud)
2. SAE J1850 VPW (10.4Kbaud)
3. ISO9141-2(5 baud init, 10.4Kbaud)
4. ISO14230-4 KWP (5 baud init, 10.4 Kbaud)
5. ISO14230-4 KWP (fast init, 10.4 Kbaud)
6. ISO15765-4 CAN (11bit ID, 500 Kbaud)
7. ISO15765-4 CAN (29bit ID, 500 Kbaud)
8. ISO15765-4 CAN (11bit ID, 250 Kbaud)
9. ISO15765-4 CAN (29bit ID, 250 Kbaud)

Car inspection

Search for OBD interfaces specifically designed for automobiles. The position of the OBD interface varies for different models (usually located in the lower left inner panel of the dashboard, above the accelerator pedal. For other models, please refer to the following figure).


Simply insert and start the vehicle.

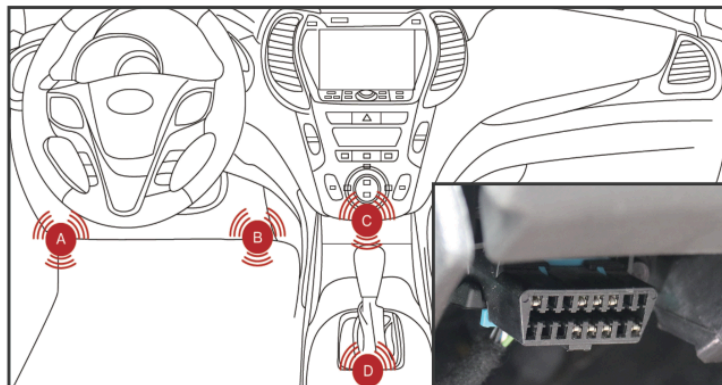

Menu page introduction and explanation


Testing the main menu

After connecting the vehicle, go to the main page and select the "OBD/EOBD" menu. Press the OK key to enter the detection function page. This menu has 9 detection functions, which can be flipped using the up/down function keys.

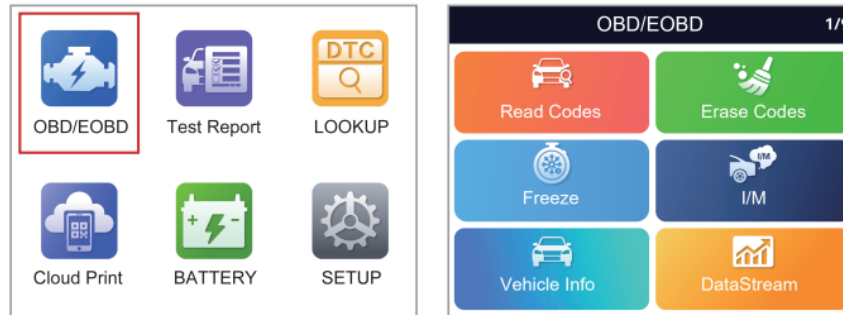


Read codes

Select the "Read Code" function to read the power system fault codes stored in the car computer and explain the meaning of the codes.

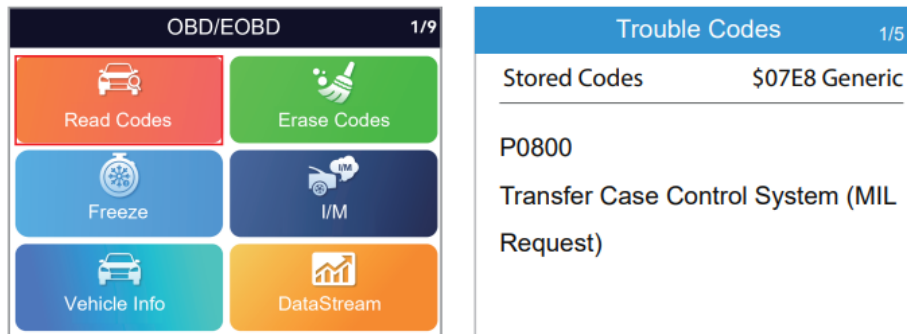

Erase codes

To delete the fault code, please select the "Erase codes" function, and the engine fault light will turn off.

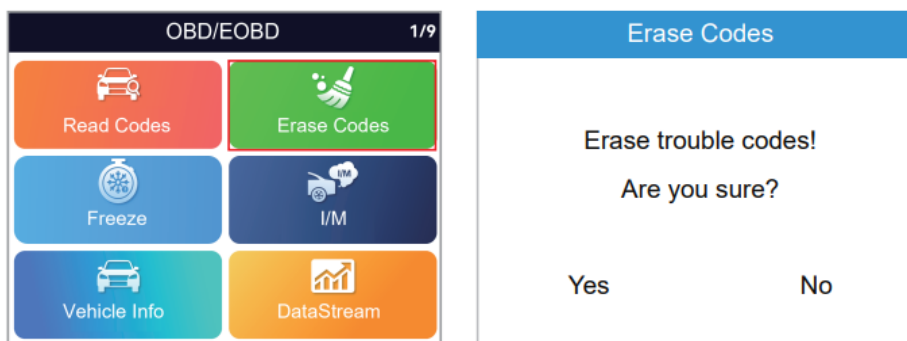

Freeze frame

When a fault code appears in the emission system, the car computer will store the data at the time of the fault.



| View Freeze Frame 1/5 | |
|-----------------------|----------|
| DTCFRZF | P0278 |
| FUELSYS1 | OL |
| FUELSYS2 | OL-Drive |
| LOAD_PCT(%) | 98.8 |
| ECT(°C) | 29 |
| SHRTFT1(%) | 3.1 |

I/M ready

The I/M ready function is used to check the operation of vehicle emission systems that comply with OBD2 standards.



| Since DTCs Cleared 1/5 | |
|------------------------|----|
| MIL Status | ON |
| Misfire Monitor | OK |
| Fuel System Mon | OK |
| Comp. Component | OK |
| Catalyst Mon | OK |
| Htd Catalyst | OK |

Vehicle information

The vehicle information function can read the vehicle identification number (VIN), calibration mark, and calibration verification number (CVN).



| Vehicle Info. 1/3 | |
|--------------------|--|
| Vehicle ID Number | |
| Calibration ID | |
| Cal. Verif. Number | |

| Vehicle ID Number | |
|-------------------|----------------|
| VIN: | 3I G1JCI 5444I |

Data stream



Read the data information of the current engine operation.



| Live Data 1/13 | |
|----------------|------|
| FUELSYS2 | OL |
| LOAD_PCT(%) | 98.8 |
| ECT(°C) | 29 |
| SHRTFT1(%) | 3.1 |
| LONGFT1(%) | 59 |
| SHRTFT2(%) | 25 |


Real-time curve

Display the read vehicle speed, load value, coolant temperature, and engine speed data in real-time as curves.

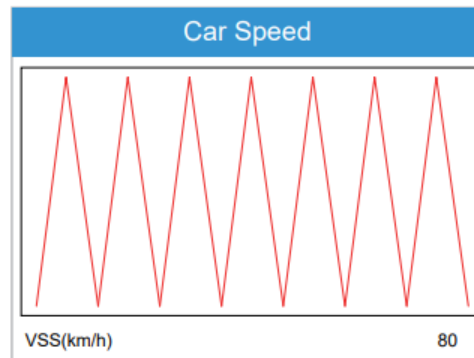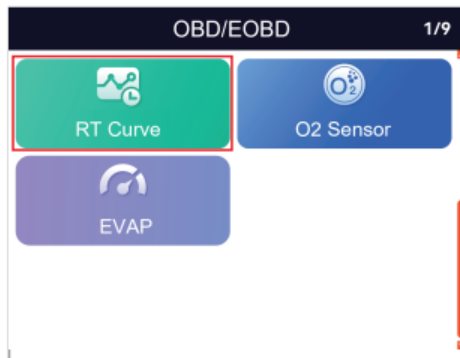

Oxygen Sensor


Detect the data of the car oxygen sensor.

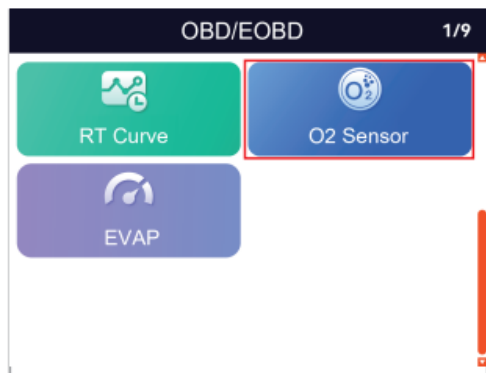

| O2 monitor test 1/2 | |
|---------------------|--------------|
| O2B4S2(V) | 1.190 |
| OBDSUP | EOBD&OBD |
| O2SLOC | S1B--4S21--4 |
| PTO_STAT | Act |
| EQ_RATB2S1 | 1.152 |
| EQ_RATB2SB | 0.182 |

EVAP



Leakage test of fuel evaporation system.

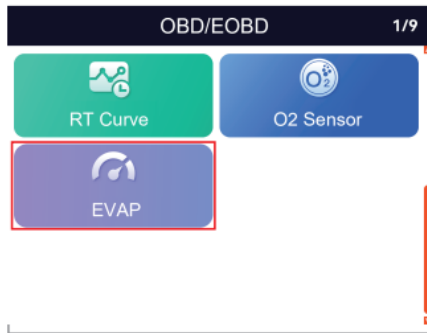

| EVAP 1/1 | |
|----------|--------|
| VPWR(V) | 25.251 |
| APP_D(%) | 89.5 |
| | |
| | |
| | |
| | |



Inspection report

Summarize the read vehicle information, fault codes, voltage, and I/M readiness status data for easy reference.

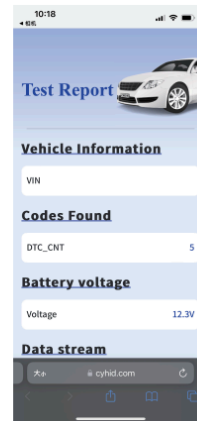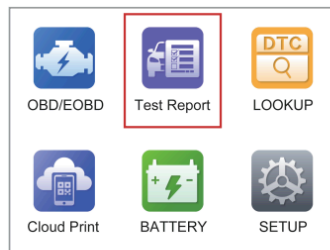

Search for fault codes

Enter the fault code through the up and down keys to inquire about its meaning.

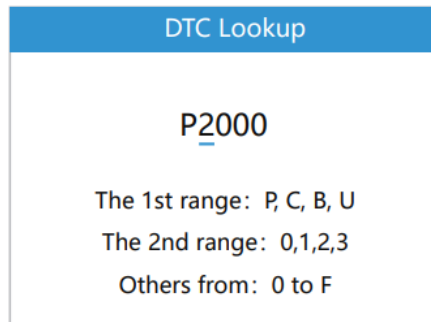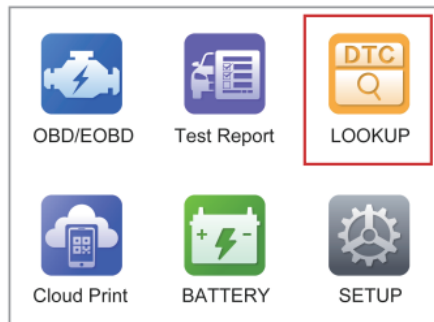


Cloud print

The read data can be generated into a QR code, which can be scanned, printed or shared through a mobile phone.




Battery test

Can detect the voltage of car batteries, display voltage waveforms, and perform battery start-up tests.

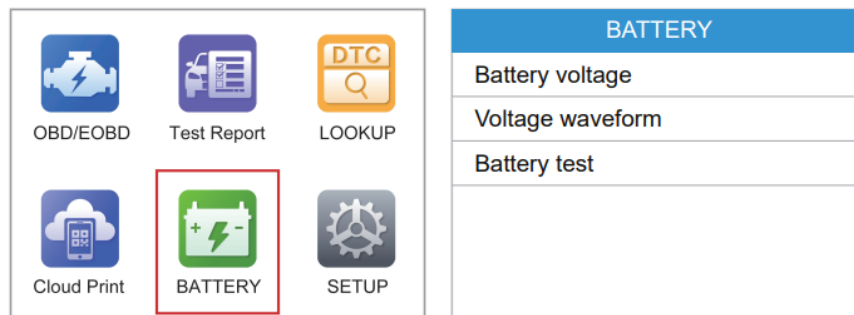

Set up

You can set the language, unit, and version of the product for viewing.

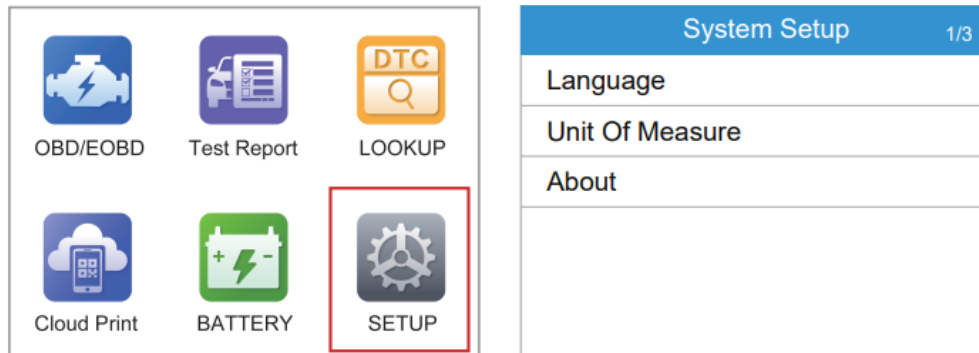

Precautions

The product is not compatible with new energy vehicles, hybrid vehicles, and models that do not comply with the OBD2 protocol.

Excuse conditions

We are committed to providing unparalleled customer support before and after sales, and the following are our disclaimer conditions for our products:

If any of the following conditions are met, customers shall not be entitled to policies within the scope of this limited warranty:

- A. Abnormal use, abnormal situations, improper storage, exposure to moisture or unauthorized modification, misuse, negligence, abuse, accidents, changes, improper installation, or other non fault behaviors of the product, including damage caused by transportation.
- B. Our company is not responsible for any damage to the product caused by external reasons (such as collision with objects), fire, flood, sand, dust, storm, lightning, earthquake or weather conditions, uncontrollable acts of natural disasters, battery leakage, theft, blown fuses, improper use of any power source, etc.